

# Set Toolbox Files Properties

## A. sldsetdocprop.exe (SOLIDWORKS Set Doc Properties).

Step 1. Open File Explorer.

Step 2. Navigate to **Program Files/ SOLIDWORKS Corp/ SOLIDWORKS/ Toolbox/ data utilities** folder  
open **sldsetdocprop.exe**, Fig. 1.

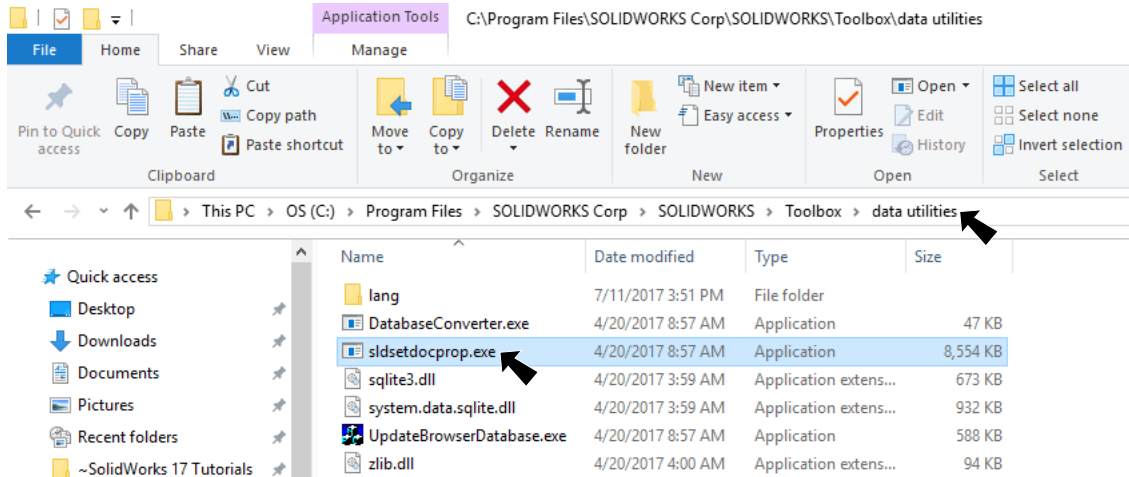


Fig. 1

Step 3. In the Set Document Property dialog box:  
click **Add Files** button, Fig. 2.

Step 4. In the Open dialog box, Fig. 3  
navigate to **My Documents/ Tech Ed 17-18/Chair** folder

click the **Screw** file.

click **Open**.

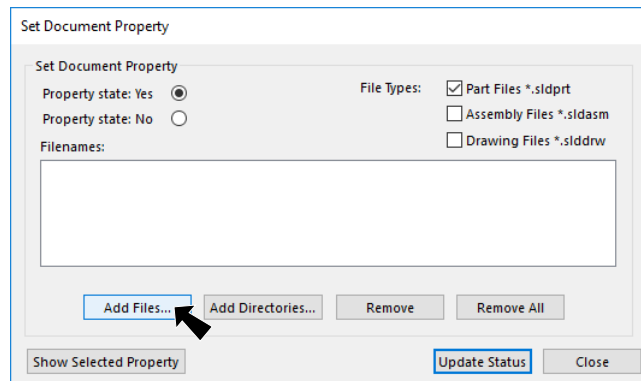


Fig. 2

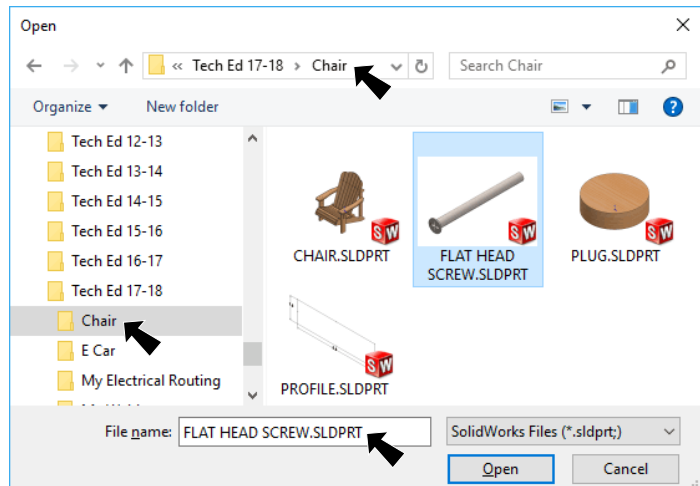
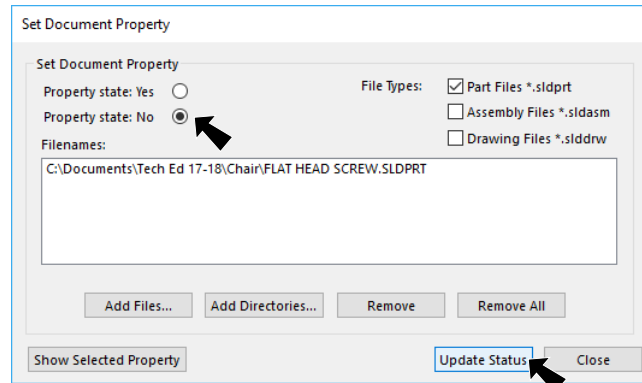


Fig. 3

Step 5. Back in the Set Document Property dialog box:  
under Set Document Property, **Fig. 4**  
select **Property state: No**

click **Update Status** button.  
click **Close** button.



**Fig. 4**