Chapter 26

Tank

Spring for Battery Holder

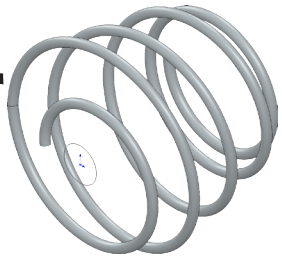

A. Circle for Helix.

Step 1. Click File Menu > New, click **Part Metric** and OK.

Step 2. Click **Front Plane** in the Feature Manager and click **Sketch** on the context toolbar, **Fig. 1**.

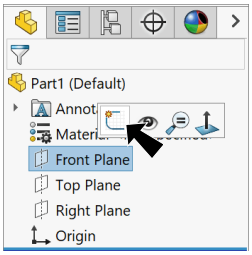

Fig. 1

Step 3. Click **Circle** (**S**) on the Sketch toolbar.

Step 4. Sketch a circle at Origin , **Fig. 2**.

Step 5. Click **Smart Dimension** (**S**) on the Sketch toolbar.

Step 6. Dimension **diameter 4.3**, **Fig. 2**.

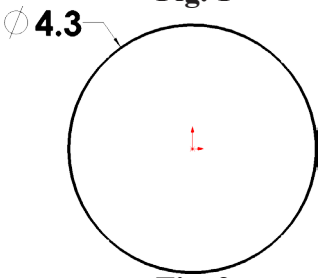

Fig. 2

B. Helix for Sweep Path.

Step 1. Click **Trimetric** on the Standard Views toolbar.

Step 2. Click Insert Menu > Curve > Helix/Spiral.

Step 3. In the Helix/Spiral Property Manager set:

under Defined By: **Fig. 3**

select **Pitch and Revolution**

under Parameters

select **Variable Pitch**

under Region Parameters set:

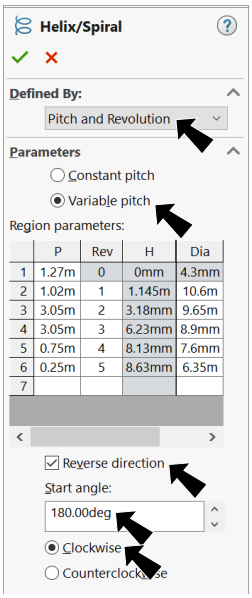

	P	Rev	H	Dia
1	1.27m	0	0mm	4.3mm
2	1.02m	1	1.145m	10.6m
3	3.05m	2	3.18mm	9.65m
4	3.05m	3	6.23mm	8.9mm
5	0.75m	4	8.13mm	7.6mm
6	0.25m	5	8.63mm	6.35m
7				

Fig. 3

use **Tab key** to move to next field

	P	Rev	Dia
1	1.27	0	4.3
2	1.02	1	10.6
3	3.05	2	9.65
4	3.05	3	8.9
5	.75	4	7.6
6	.25	5	6.35

check **Reverse direction**

Start angle 180

check **Clockwise**

click OK .

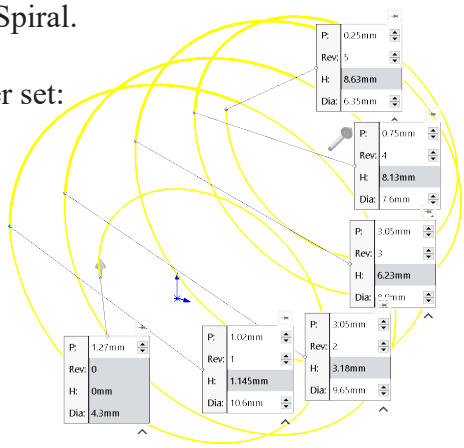

Fig. 5

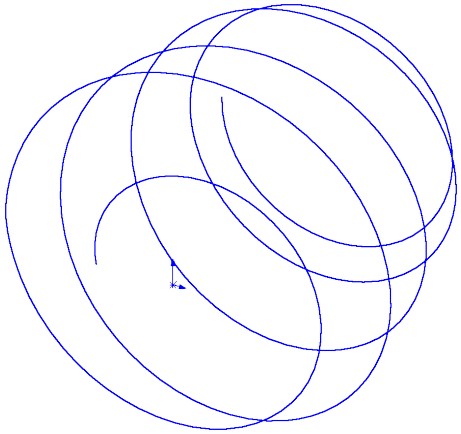

Fig. 6

Use Tab key to move to next field

© Cudacountry.net Tech Ed

http://www.cudacountry.net email:cudacountry@hotmail.com

C. Save as "SPRING".

Step 1. Click File Menu > Save As.

Step 2. Key-in **SPRING** for the filename and press ENTER.

D. Sweep.

Step 1. Click **Features** Features on the Command Manager toolbar.

Step 2. Click **Swept Boss/Base** Swept Boss/Base on the Features toolbar.

Step 3. In the Swept Boss/Base Property Manager:
under Profile and Path, **Fig. 6**
select **Circular Profile**
Diameter **.5**
Path click **helix**
click OK .

Step 4. Save (**Ctrl-S**)..

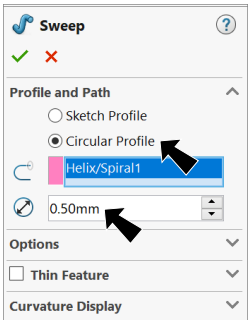

Fig. 6

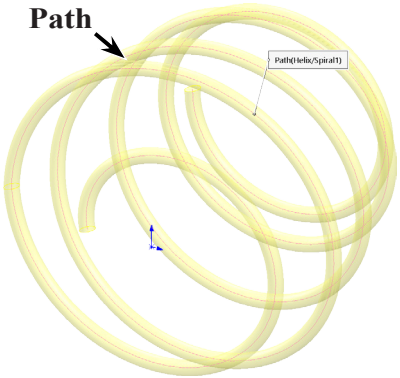

Fig. 7

E. Sketch for Mate.

Step 1. **Hide Helix**. To hide, click **Helix/Sprial1** in Feature Manager and **Hide** on the context toolbar, **Fig. 8**.

Step 2. Click **Front Plane** in the Feature Manager and click **Sketch** on the context toolbar, **Fig. 9**.

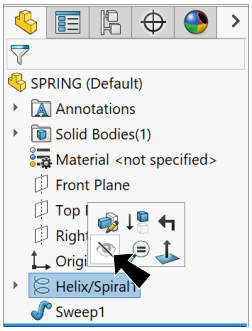

Fig. 8

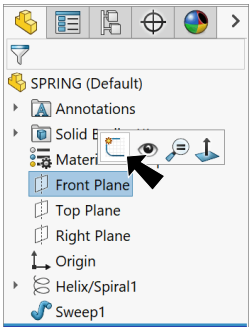

Fig. 9

Step 3. Click **Circle** (**S**) on the Sketch toolbar.

Step 4. Sketch circle at Origin , **Fig. 10**.

Step 5. Click **Smart Dimension** Smart Dimension (**S**) on the Sketch toolbar.

Step 6. Dimension **diameter 2**, **Fig. 10**.

Step 7. Click **Exit Sketch** Exit Sketch on the Sketch toolbar.

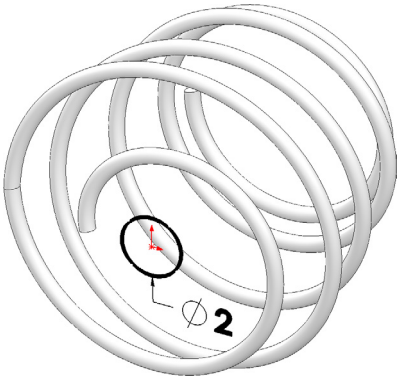

Fig. 10

F. Appearance.

Step 1. Click Spring to select the part, click **Appearance Callout** on the context toolbar and click **SPRING**, **Fig. 11**.

Step 2. In the Appearances Task pane, expand **Metal**, click **Chrome** and in the lower pane select **chromium plate**, **Fig. 12**. Click OK in the Property Manager.

Step 3. Save (**Ctrl-S**).

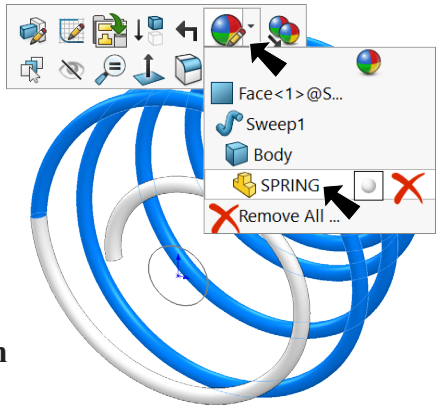

Fig. 11

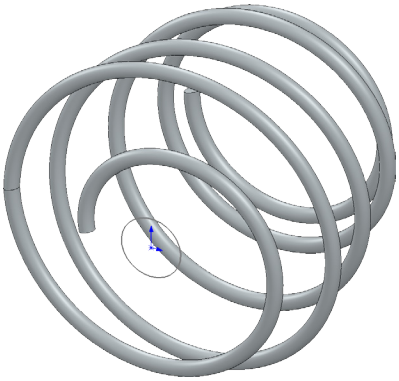

Fig. 13

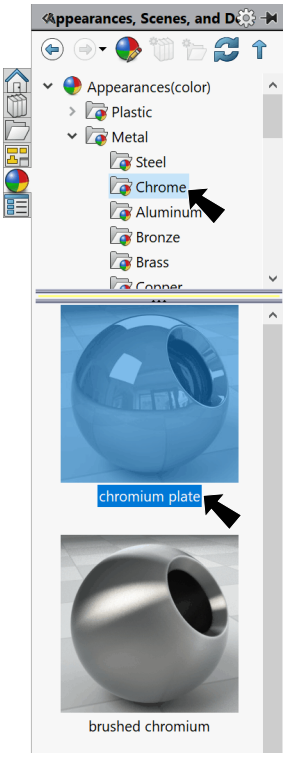

Fig. 13