



Chapter 6

E's Small Car

Set Toolbox Files Properties

A. sldsetdocprop.exe (SOLIDWORKS Set Doc Properties).

Step 1. If necessary, close your toolbox file (Sprocket) in SOLIDWORKS.

Step 2. Open File Explorer.

Step 3. Navigate to **Program Files/ SOLIDWORKS Corp/ SOLIDWORKS/ Toolbox/ data utilities** folder

open **sldsetdocprop.exe**, Fig. 1.

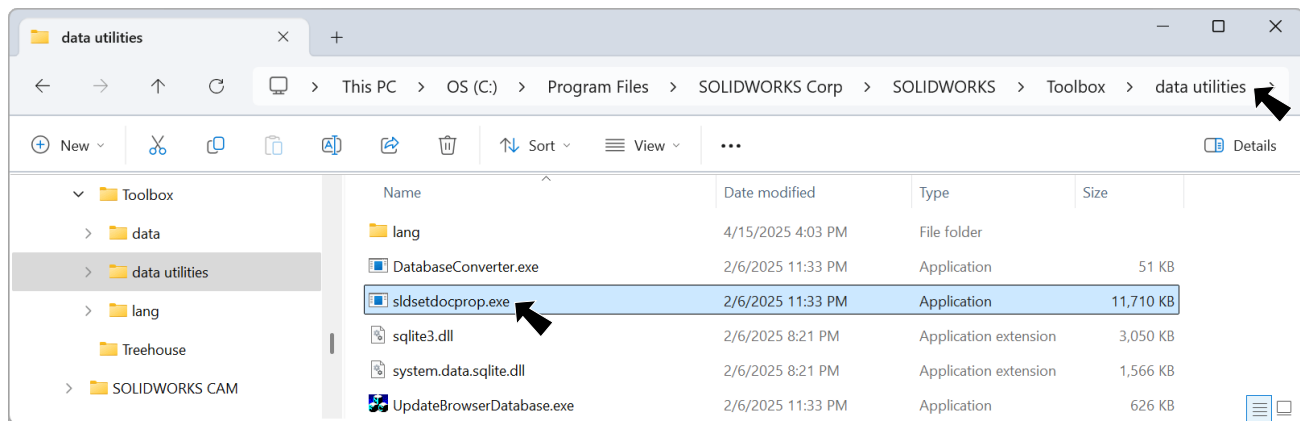


Fig. 1

Step 4. In the Set Document Property dialog box:

click **Add Files** button, Fig. 2.

Step 5. In the Open dialog box:

Navigate to **My Documents/ Tech Ed 25-26/ ESCar** folder

Click the **toolbox part SPROCKET 12T 1T**

and click **Open**, Fig. 3.

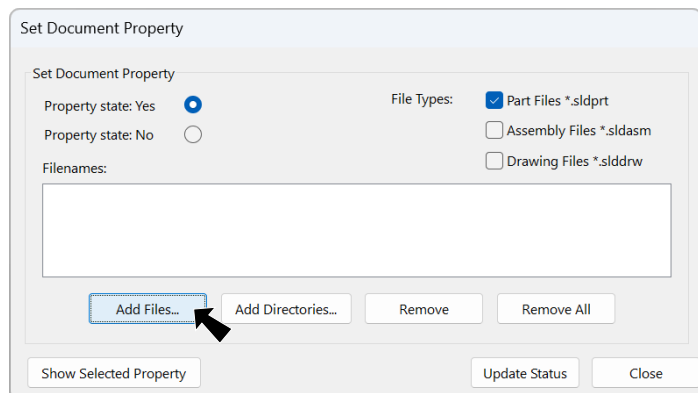


Fig. 2

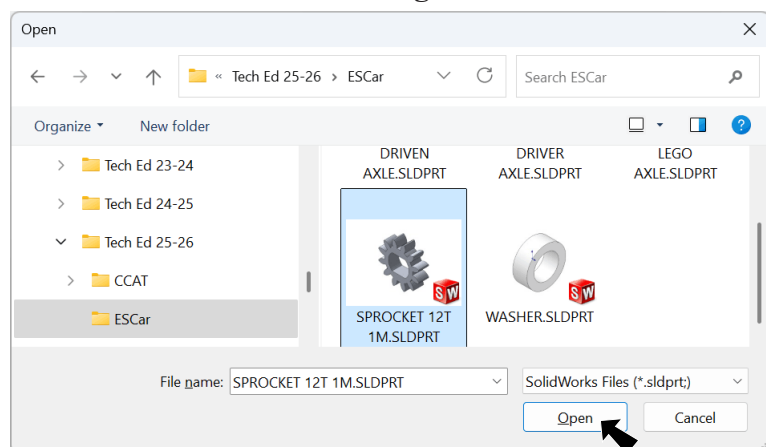


Fig. 3

9/9/25

Step 6 Back in the Set Document Property dialog box:
under Set Document Property, **Fig. 4**
select **Property state: No**
click **Update Status** button.

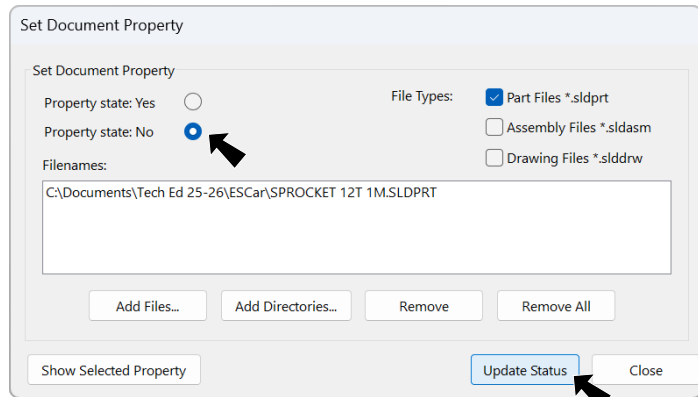


Fig. 4

Step 7. All is good. But, if you want to confirm update, select a file and click **Show Selected Property** button, **Fig. 5**.
click **Close** button.

Step 8. In an Assembly Feature Tree these files will now show as part icon  as opposed to the toolbox icon .

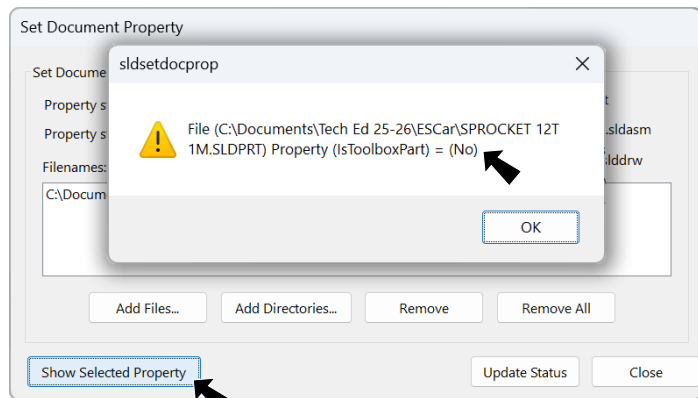


Fig. 5

Tip: Create a desktop short cut to **sldsetdocprop.exe**.

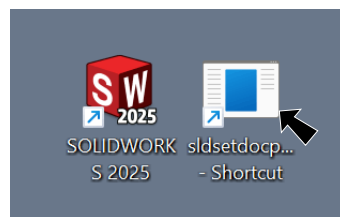


Fig. 6