


Speedway Car Assembly



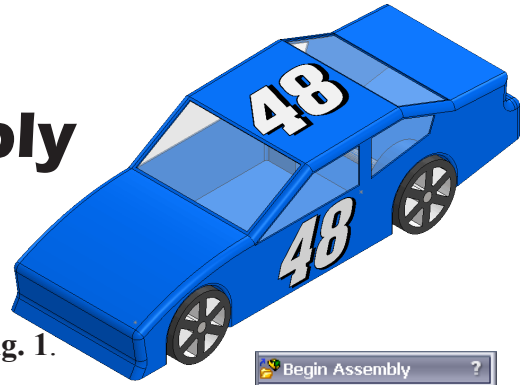

A. Insert Body, Axles and Wheels.

Step 1. Click File Menu > New, click Assembly and OK.

Step 2. Click **Keep Visible**  in the Property Manager, Fig. 1.

Step 3. Click **Browse** in the Property Manager, Fig. 1.

Step 4. Select your **BODY** file and click Open.

Step 5. Click OK  in the Property Manager. This will place the Body origin at the assembly origin and fix the position of the Body so that it cannot move. This fixed component should have a (f) before its name in the Feature Manager  (f) BODY<1>.

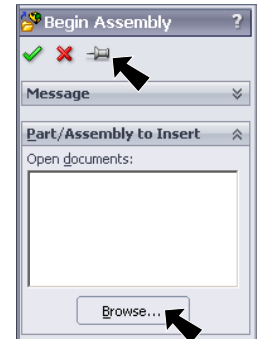



Fig. 1

Step 6. Click **Browse** in the Property Manager, Fig. 1.

Step 7. Select your **AXLE** file and click Open.

Step 8. Position **Axle** near Front Axle hole, Fig. 2. When Axle snaps into place and cursor changes to indicate a Concentric mate , click to release Axle.

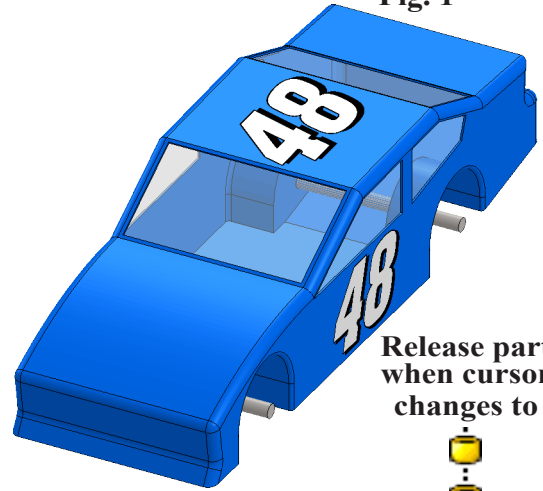





Fig. 2

Release part when cursor changes to 

Step 9. Position **Axle** near Rear Axle hole, Fig. 2. When Axle snaps into place and cursor changes to indicate a Concentric mate , click to release Axle.

Step 10. Click **Browse** in the Property Manager.

Step 11. Select your **WHEEL** file and click Open.

Step 12. Position Wheel over Front Axle, Fig. 3. When Wheel snaps into place and cursor changes to indicate a Concentric mate , click to release Wheel. Click Add/Finish Mate , Fig. 4.

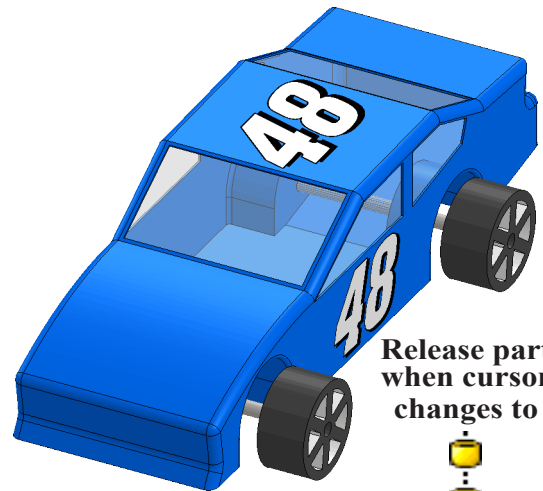


Fig. 3

Release part when cursor changes to 

Step 13. Place **WHEEL** at Rear Axle, Fig. 3.




Fig. 4

Step 14. Rotate view to view **right side of Assembly** as shown in **Fig. 5**. To rotate, hold down middle mouse button (wheel) and drag.



Fig. 5

Step 15. Place Wheels on right side Axles, **Fig. 5**. Release Wheel when cursor changes to indicate a Concentric mate

Step 16. Click OK  in the Property Manager when done.

B. Save as "CAR ASSEMBLY".

Step 1. Click File Menu > Save As.


Step 2. Key-in **CAR ASSEMBLY** for the filename and press ENTER.

C. Mate: Wheels and Axles.

Step 1. Click **Filter Faces**  (X) on the **Selection Filter toolbar** at the bottom of the display, **Fig. 6**. If necessary, use **F5** key to display the toolbar.



Fig. 6

Step 2. Click **Mate**  on the Assembly toolbar.

Step 3. Click **side face Front Wheel** and **end face of Front Axle**, **Fig. 7**.




Fig. 7

Step 4. Click **Add/Finish Mate**  in Mate pop-up toolbar to add a **Coincident** mate, **Fig. 8**.



Fig. 8

Step 5. Click **side face Rear Wheel** and **end face of Rear Axle**, **Fig. 9**.

Step 6. Click **Add/Finish Mate**  in Mate pop-up toolbar to add a **Coincident** mate.

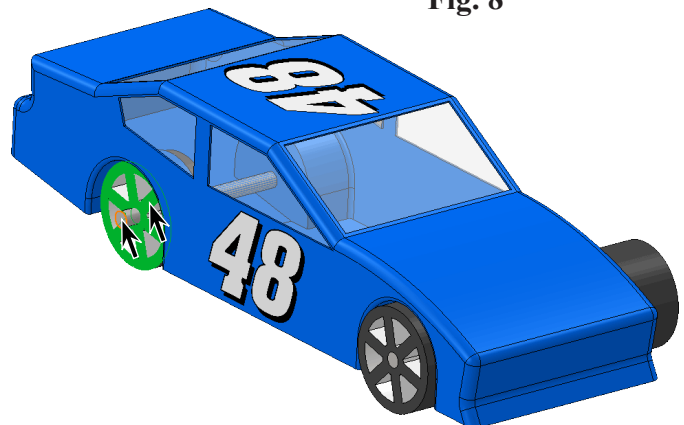


Fig. 9

Step 7. Click **Trimetric**  on the Standard Views toolbar.

Step 8. Mate the **side face of Wheels** and to **end face of Axles**, **Fig. 10** and **Fig. 11**. You might have to move the Wheel. Grab the Wheel and move it. Don't click Wheel and try to move Wheel.

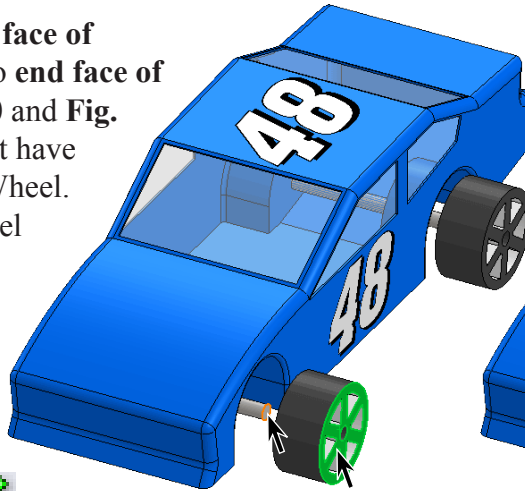


Fig. 10

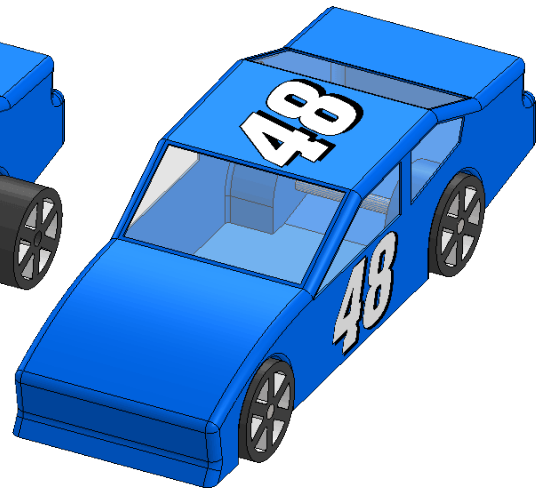


Fig. 11

Step 9. Click **OK**  in the Property Manager when done.


Step 10. Click **Filter Faces**  (X) to **turn OFF** on the **Selection Filter toolbar** at the bottom of the display, **Fig. 12**. If necessary, use **F5** key to display the toolbar.



Fig. 12

Step 11. Save. Use **Ctrl-S**.